



## 6 Function Settings 功能設定

### • LCD Display / LCD畫面說明



### • QR Code Steps / QR Code步驟

Please go to **【PLAY Store】**, entering the "Hundure" in search box to get the App "mCard Access", and install it. After the installation, you can use the scanning function of APP to get a trial card number "1234567890" by scanning the QR code below. Please refer to the operating instructions on the App before use.

請至**【PLAY商店】**，輸入"Hundure"搜尋，找到"mCard Access"並安裝。安裝後可使用APP的掃描功能，掃描 QR Code取得試用版卡號"1234567890"。使用方式請參閱APP上的操作說明。



### • QR Code

Apply to open door by cell phone/ 使用手機開門



### • LCD Display / LCD畫面圖示說明

Function/ 功能	Description / 說明
T&A/ 考勤	Provide 32 shift group settings (please go to the website → Attendance section). 提供 32 組班別設定(請至網頁→考勤類)
Config/ 設定	Provide configuration settings for access control. 提供門禁參數設定
Input ID/輸入卡號	Allows manual entry of card numbers (function inactive when keypad is disabled). 手動輸入卡號(若按鍵功能關閉,此功能則無效)
Bell/ 門鈴	Bell/ 門鈴

### • Before entering the config . Please enter or scan the master card (default is 30191000).

進入設定之前，需輸入/感應母卡號碼(預設為30191000)

User : Personnel can be added or deleted. (Import/export of personnel data is available via web interface.)  
使用者：可新增或刪除人員。(透過網頁操作可匯入/匯出人員資料)

After adding a new person, the system prompts you to register a face. If skipped, the device uses the card number. To register, select [Register Face], follow the camera instructions, capture the face, and press Confirm

新增人員後可選擇是否註冊人臉；若未註冊，裝置以卡號識別。

選擇【註冊人臉】，進入攝像頭畫面，偵測到人臉後點擊相機圖示並按【確定】，即可完成。

Language : Provides options for English and Traditional Chinese.

語系：提供English、繁體中文選項。

Parameter : Provides configuration options for various access control parameters.

參數設定：提供門禁參數設置。

■ Door Relay : After the door relay is activated, it will reset after the configured number of seconds.  
開門時間：門繼電器動作後，會以設定的秒數復歸。

■ Alarm Relay/警報時間：

○ Toggle : Alarm relay, once triggered, requires a second trigger to reset.

警報動作後，需再觸發一次才會復歸。

○ Latch : Alarm relay, once triggered, requires a disarm code to reset.

警報動作後，需輸入解除碼才會復歸。

○ Pulse : The system will reset after the alarm action, based on the preset duration in seconds.

The time unit is 0.1 seconds, with a maximum value of 600 seconds (6000). (The duration must be set through the website)

警報動作後，會以設定的秒數復歸。時間單位為0.1秒，最大值为600秒(6000)。(秒數需透過網頁設定)

■ Door Sensor : The set time is to start detecting after the door opening time ends. The time unit is 0.1 seconds, with a maximum value of 600 seconds (6000).

門磁偵測：設定的時間是於開門時間結束後開始偵測。(時間單位為0.1秒，最大值为600秒(6000))

■ Report card check time : When a card is swiped twice within the set time, the second swipe will be considered invalid, not recorded, and will issue an error sound. Enter 0 to not check.

重複刷卡檢查時間：在設定的時間內，當重複刷同一張卡片，則第二次的刷卡視為無效不被記錄並發出錯誤警響，輸入 0 表示不檢查。

■ Read interface/讀卡介面：

○ T2 : The reader supports T2 mode, and the system returns a 10-digit card number.

卡機支援T2模式，系統送回10碼卡號。

○ Wiegand 26(8) : The reader supports Wiegand 26 mode, and the system returns a 8-digit card number.

卡機支援Wiegand 26模式，系統送回8碼卡號。

○ Wiegand 26(10) : The reader supports Wiegand 26 mode. The system first reads back the 8-digit card number, automatically adds two 0 in front, and then sends out the 10-digit card number.

卡機支援Wiegand 26模式，系統先讀回8碼卡號，並自動在前面補兩個0，再送出10碼卡號。

○ Wiegand 34 : The reader supports Wiegand 34 mode, and the system returns 10 8-digit card number.

卡機支援Wiegand34模式，系統送回10碼卡號。

Comm : Provide Set Auto IP (via DHCP) and Set Manual IP (user specifies a fixed IP)

通訊設定：提供自動取得IP(透過DHCP)及手動取得IP(使用者指定一個固定IP)。

■ IP Address : Input IP address. (Selecting Set Auto IP, no settings are required)

IP位址：使用者指定。(選擇自動取得IP則無需設定)

■ Sub Mask : The default is 255.255.255.0

子網路遮罩：出廠預設為255.255.255.0

■ Gateway : The default is 192.168.250.1

預設閘道：出廠預設為192.168.250.1

■ Port : Communication port, default: 0 (Function Retention)

埠號：通訊連接埠，出廠預設為:0。(功能保留)

■ DHCP : Automatic IP assignment. (No setup needed after startup.)

自動分配IP。(啟動後，上述參數無須設定)

Note: DHCP should assign a fixed IP to the device. 注意：DHCP 應分配給設備為固定的IP

In standalone operation mode, input the user-defined communication settings or the IP address assigned via DHCP into the browser at <http://XXX.XXX.XXX.XXX/> (e.g. <http://172.16.44.10/>).

透過單機操作，將使用者自訂的通訊設定或透過DHCP方式給的IP位址，在瀏覽器網頁上面輸入 <http://XXX.XXX.XXX.XXX/> (如範例：<http://172.16.44.10/>)。

Username and Password is required to input. (The default username is admin and the password is password).


需輸入Username及Password。(預設帳號為:admin；密碼為: password)

### • Do not close network TCP port 5500

To ensure proper connection between the webpage and the device, please keep TCP port 5500 open (both inbound and outbound traffic must be allowed).

### • 請勿關閉網路TCP通訊埠5500

為了網頁與設備之間能正常連線，請在開放 TCP 通訊埠5500 (入站/出站皆需允許)

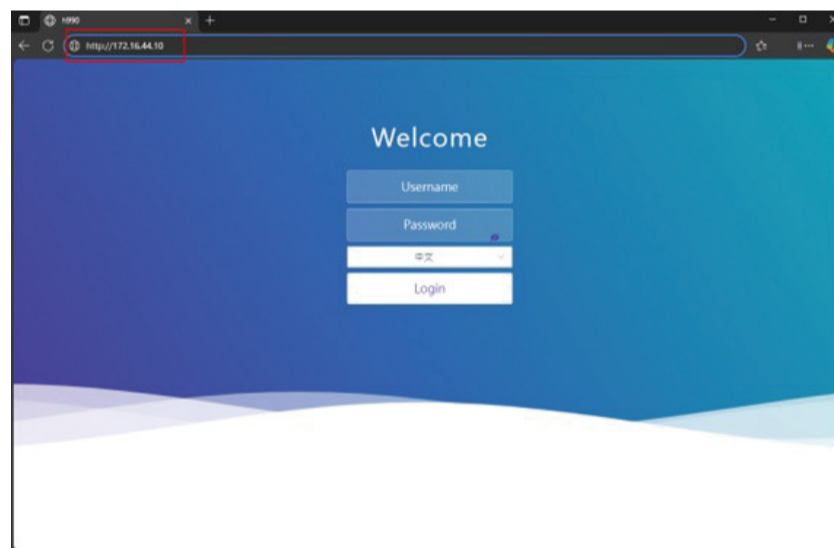

### System : Configure device basic parameters.

系統設定：設定裝置基本參數。

■ Master Card/Code : Card number to enter primary device setup mode (default is 30191000).

管理母卡：進入設定模式之卡號(預設30191000)。

■ Disarm Card/Code : Disarm the alarm triggered by a duress code. The default value is 0000.

解除卡號：解除因脅迫碼觸發及外力破壞的警報，預設值為0000。

■ Duress Card/Code : The alarm will be triggered by a duress code. The duress code can be customized.

脅迫卡號：輸入脅迫碼會觸發及外力破壞的警報，脅迫碼自訂。

■ Date : User-defined

日期：使用者自訂

■ Time : User-defined

時間：使用者自訂

■ Keypad : If disabled, the card number input function will not be available.

按鍵：選擇關閉，則輸入卡號功能無法使用。

■ Volume : The volume can be adjusted to disable, Low, middle, or loudly.

音量：關閉、小、中、大聲。

■ Reset : Allows deletion of all card swipe records and restoration to default settings.

重置選項：提供刪除全部刷卡紀錄及恢復到初始值

Info : Shows the current standalone device version, total valid card entries, and swipe record count.

主機訊息：顯示目前單機裝置的版本、現有合法卡筆數、現有刷卡紀錄筆數。