

- 請為HAC-4200N選用漢軍RS-485或Wiegand/ T2格式讀卡機。
- 詳細資訊內容請參閱產品手冊。

www.hundure.com

Connection / 接线/接線


- We suggest to set relay to “NO” mode for the connection of f1. Electric Strikes2. Apartment Lock.
- We suggest to set relay to “NC” mode for the connection of f1. Electric Bolt Lock2. Electromagnetic Lock
- Under normal situation we suggest to set ALARM relay 5-8 in “NO” mode.



- 断电开门的电子锁应调整为NC状态,如阳极锁、磁力锁等。
- 通电开门的电子锁应调整为NO状态,如阴极锁、公寓电锁等。
- 一般警报器都属於通电启动的方式,relay 5-8警报器固定为NO模式。


- 斷電開門的電子鎖應調整為NC狀態,如陽極鎖、磁力鎖等。
- 通電開門的電子鎖應調整為NO狀態,如陰極鎖、公寓電鎖等。
- 一般警報器都屬於通電啟動的方式,relay 5-8警報器固定為NO模式。

Step 1 Power Connections / 电源接线/ 電源接線

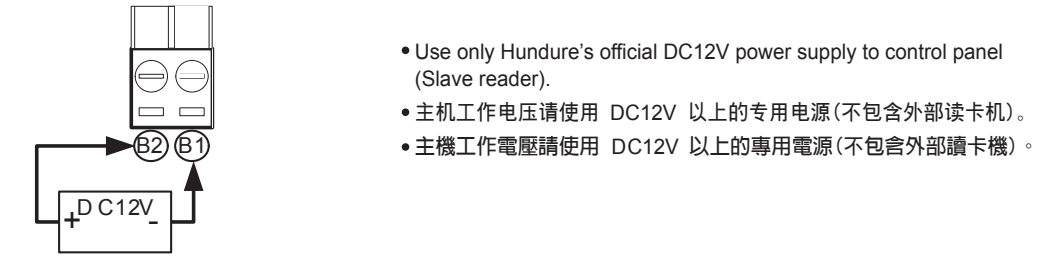


- Use only Hundure's official DC12V power supply to control panel (Slave reader).
- 主机工作电压请使用 DC12V 以上的专用电源 (不包含外部读卡机)。
- 主機工作電壓請使用 DC12V 以上的專用電源 (不包含外部讀卡機)。

Step 2 Communication / 通讯接线/ 通訊接線

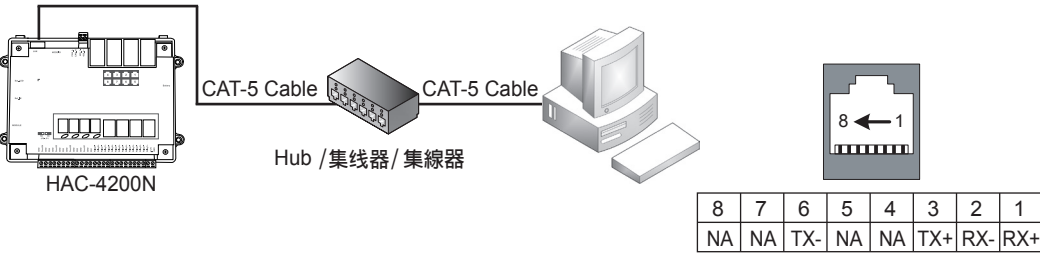

Place the Software CD on the CD ROM. Execute 830Tool.exe and the window on the left will appear:

1. Click on “Search” button to locate the control panels over the network. Returned results will be shown in the device list area.
2. Select a device to modify settings.
3. Enter new IP, Submask, Gateway and Port No..
4. Press “Broadcast Setup” button to complete the settings.
5. Kindly wait for 10-20 sec before searching the device again. Check if the parameters are correct and successfully modified.

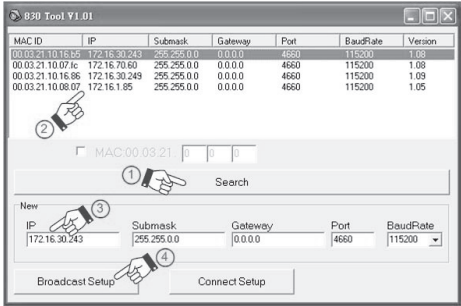

Default Settings:
IP: 172.16.250.100
Port : 4660
Baud Rate : Do not modify

相关出厂设定值为:
IP: 172.16.250.100
Port: 4660
BaudRate: 不可修改

相關出廠設定值為:
IP: 172.16.250.100
Port: 4660
BaudRate: 不可修改


將光碟片放入光碟機, 搜尋830Tool.exe并且執行程式, 執行後畫面如右:

1. 按“Search”按钮搜寻网路上相容的装置设备, 搜寻结果会显示在视窗上。
2. 點選所要修改的裝置設備將其項目反藍。
3. 輸入新的 IP 、Submask、Gateway以及通訊埠号。
4. 按下“Broadcast Setup”按钮完成设定。
5. 請稍後10~20秒後再重新搜尋一次, 确认修改後的设定值是否正确。


將光碟片放入光碟機, 搜尋830Tool.exe並且執行程式, 執行後畫面如右:

1. 按“Search”按钮搜尋網路上相容的裝置設備, 搜尋結果會顯示在視窗上。
2. 點選所要修改的裝置設備將其項目反藍。
3. 輸入新的 IP 、Submask、Gateway以及通訊埠號。
4. 按下“Broadcast Setup”按钮完成設定。
5. 請稍後10~20秒後再重新搜尋一次, 確認修改後的設定值是否正确。


• RS-485

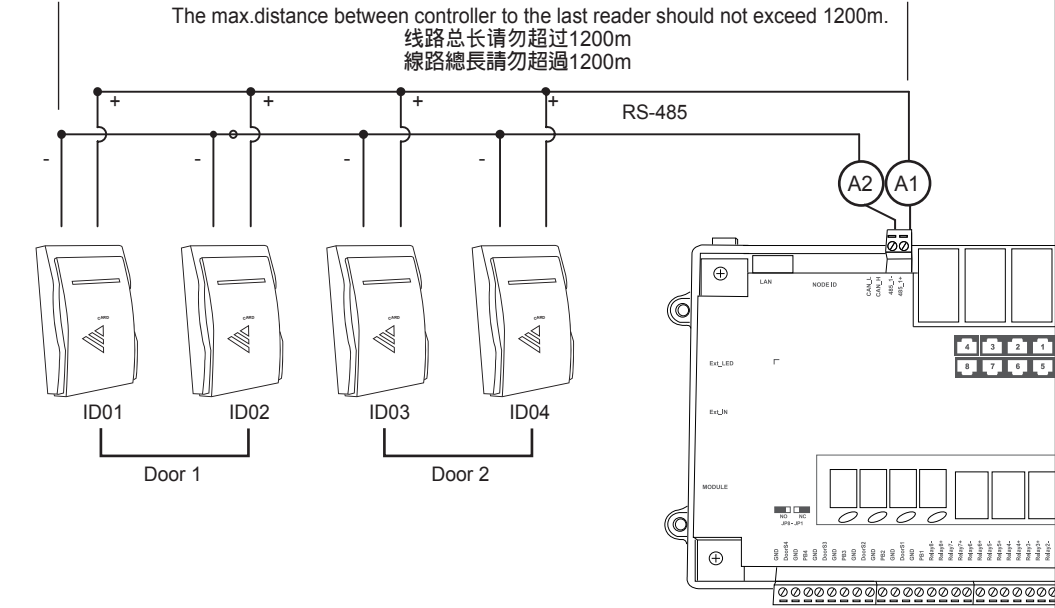

- Wiegand Reader Connection / Wiegand读卡机介面接法 / Wiegand讀卡機介面接法
- We suggest to use the CAT-5 ethernet cable. / 建议使用CAT-5网路线 / 建議使用CAT-5
- Don't connect to ethernet to avoid damage. / 勿接以太网路, 以免造成损坏 / 勿接以太网路, 以免造成損壞

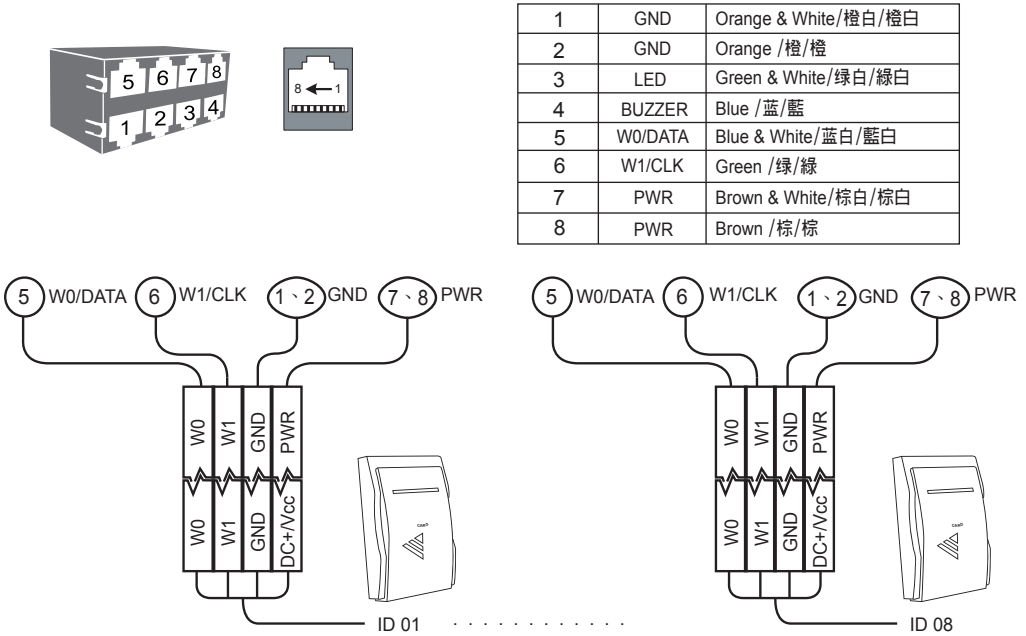

• ABA Track2 Reader Connection / ABA Track2读卡机介面接法 / ABA Track2讀卡機介面接法

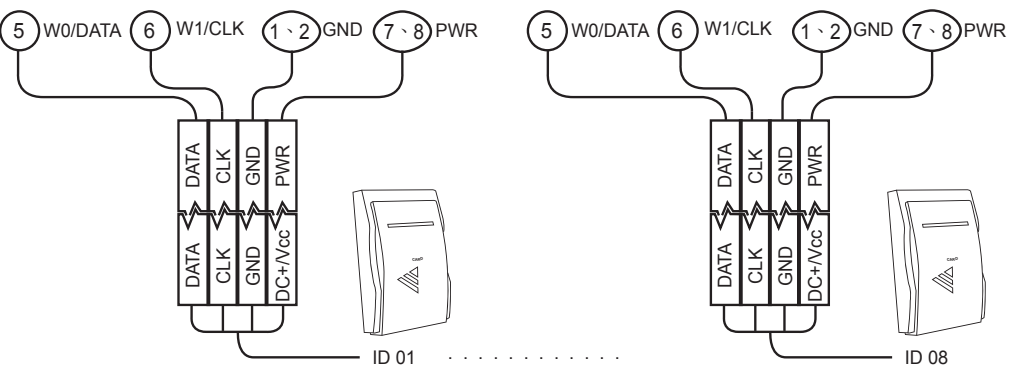

Step 3 Others / 其他/ 其他


Please separate power supply of control panel, electric locks and security alarms.

电子锁、警报器等外部装置, 请勿与控制主机共用直流电源。
電子鎖、警報器等外部裝置, 請勿與控制主機共用直流電源。



See the wire connections illustrated above are for DoorS1and PB1; for DoorS2~4 and PB2~4 wire connections, kindly refer to the Layout section on the front page.

上图接线以DoorS1及 PB1为范例, DoorS2~4及PB2~4 请自行参考前页配置表的功能定义。
上圖接線以DoorS1及 PB1為範例, DoorS2~4及PB2~4 請自行參考前頁配置表的功能定義。

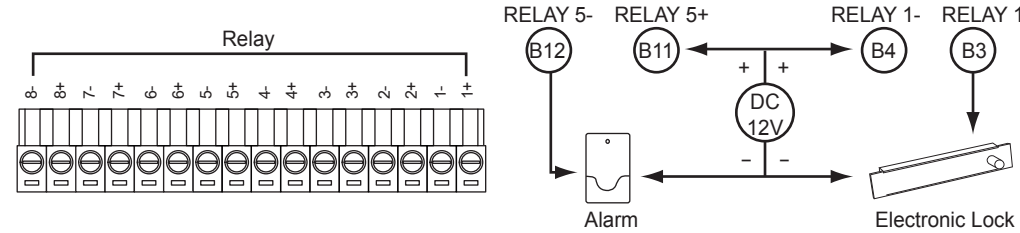

Relay 1~4 is Door Relay Output. Relay 5~8 is Alarm Relay Output.
See the wire connections illustrated above are for Relay 1and Relay 5; for Relay2~4and Relay 6~8 wire connections, kindly refer to the Layout section.

Relay 1~4 为Door Relay 输出。 Relay 5~8为Alarm Relay 输出。
上图接线以Relay1及 Relay 5为范例, Relay2~4及Relay 6~8 请参考范例接法。

Relay 1~4 為Door Relay 輸出。 Relay 5~8為Alarm Relay 輸出。
上圖接線以Relay1及 Relay 5為範例, Relay2~4及Relay 6~8 請參考範例接法。

5 Testing / 测试/ 測試

