


1 Package Contents / 包装内容/ 包装内容


Kindly ensure the product's contents upon unpacking; please refer to this quick start guide regarding the product 's specifications and important notices.

打开包装确认产品包装内容, 并请详细阅读此手册, 认识产品规格特性与注意事项。



打開包裝確認產品包裝內容, 並請詳細閱讀此手冊, 認識產品規格特性與注意事項。

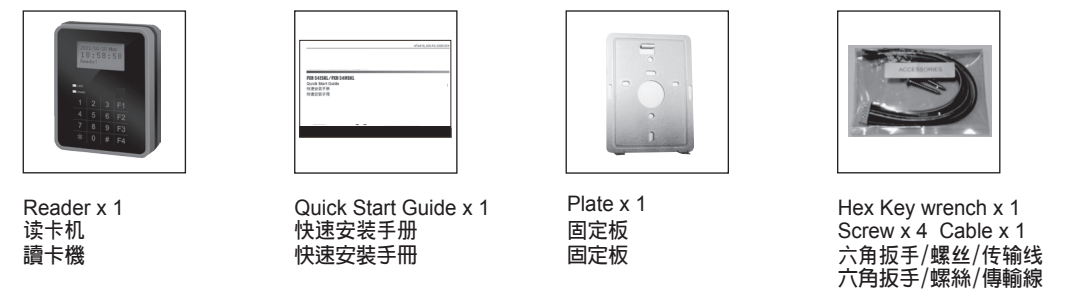

2 Physical Dimension / 外观尺寸/ 外觀尺寸

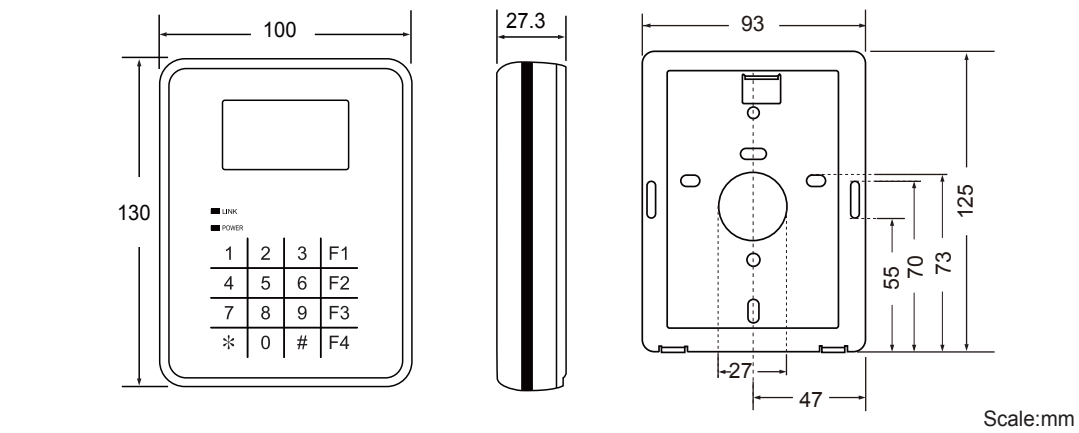

3 Installation / 安装/ 安裝

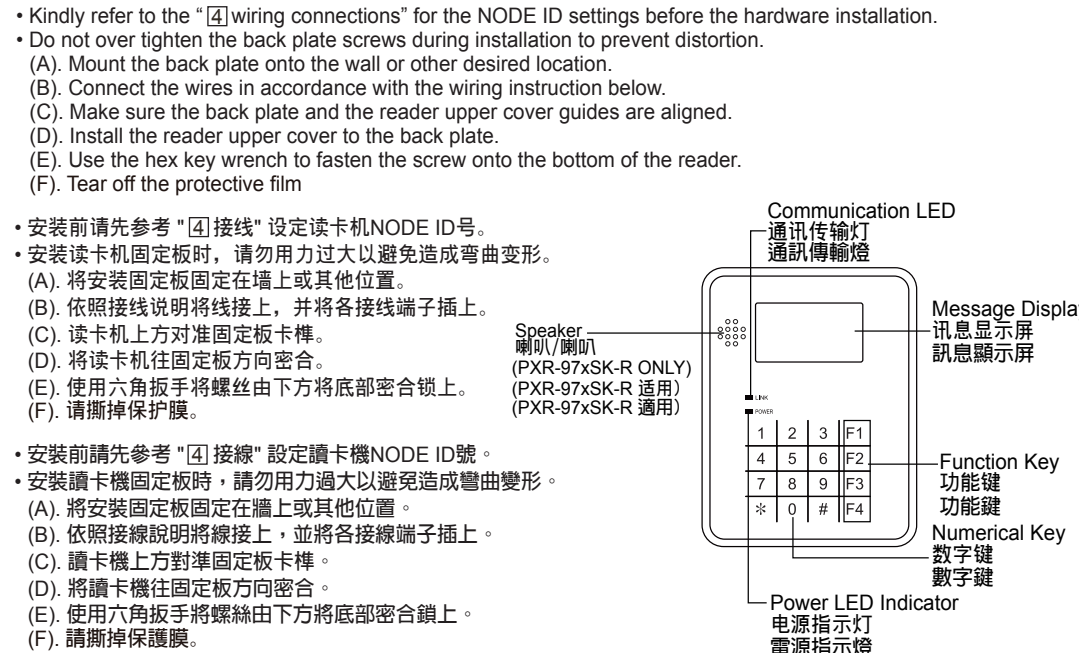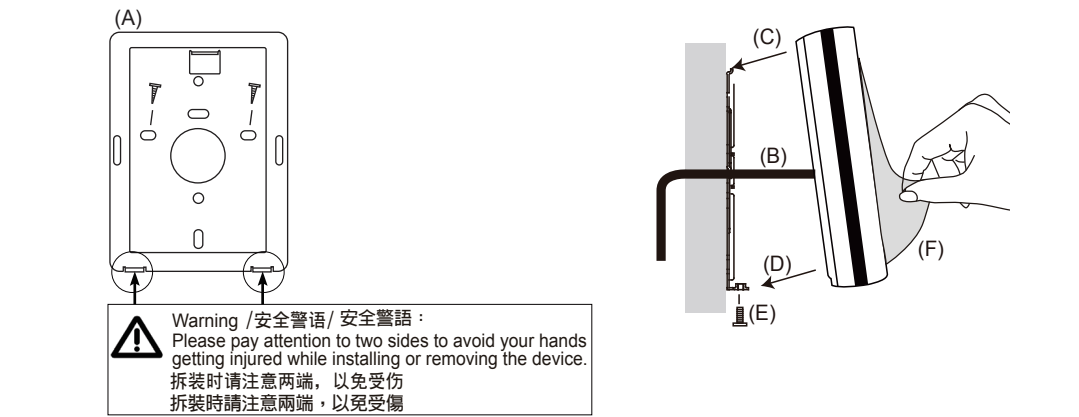

HUNDURE

HUNDURE TECHNOLOGY CO., LTD.

RS-485 PROXIMITY READER PXR-97 SERIES


Quick Start Guide

快速安装手册

快速安裝手冊

Ver. 1.1

4 Wiring Connections / 接线/ 接線

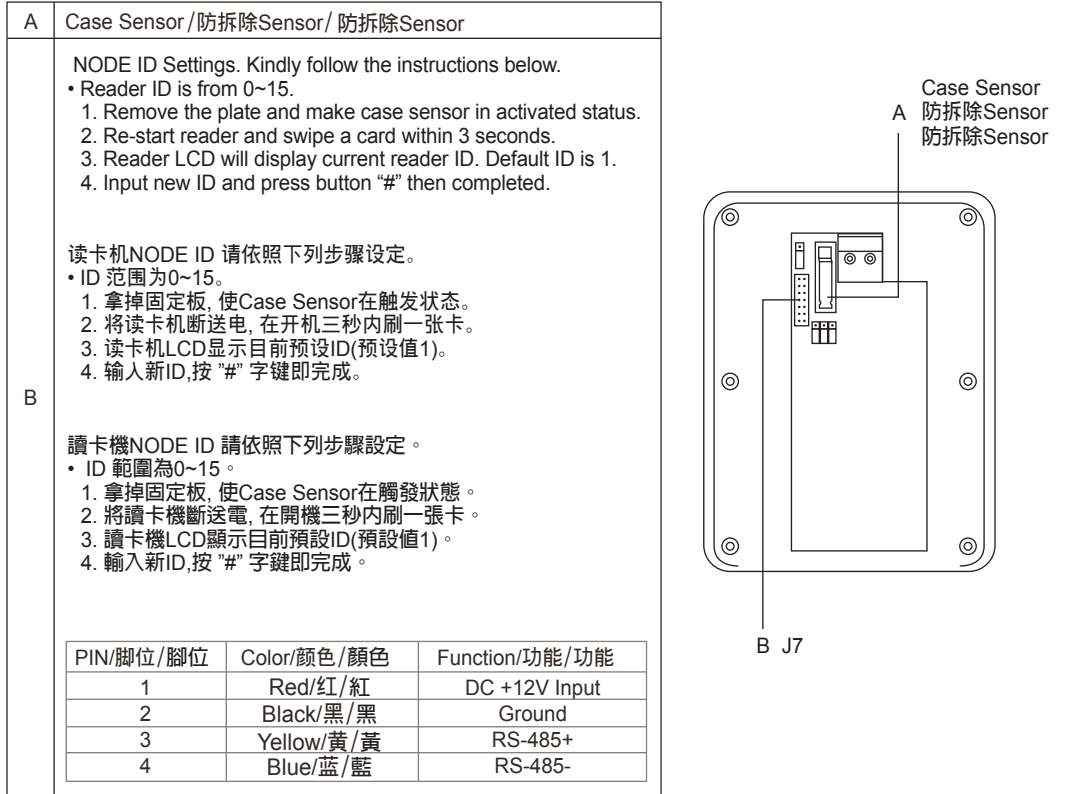

1. It is recommended to use Linear direct current DC 12V +15%~-10%.
2. Usage of switching power adaptor may shorten the read range.
1. 读卡机电源建议使用线性直流电压, 输入范围 DC 12V +15% ~ -10%。
2. 交换式电源可能导致读卡机之感应距离缩短。
1. 讀卡機電源建議使用線性直流電壓, 輸入範圍 DC 12V +15% ~ -10%。
2. 交換式電源可能導致讀卡機之感應距離縮短。

Important Notice:
*Please provide a separate power supply for each reader. A long transmission distance could cause power degradation.
*If the reader is installed upon metallic object, add proper thickly plastic separator on back of reader for isolation and avoid interference.
*The distance between two readers should be over 30cm to prevent radio frequency interference from each other.

注意事項
*读卡机请使用独立电源, 以避免因传输距离的电流衰减而影响读卡机正常运作。
*读卡机感应距离容易受到金属等物质的影响, 安装位置如为金属材质, 建议在读卡机背部加装适当厚度的隔离垫片。
*2个读卡机如果距离太近将会互相干扰而影响感应距离甚至无法感应, 建议2个读卡机之间的距离最少30公分以上。

注意事項
*讀卡機請使用獨立電源, 以避免因傳輸距離的電流衰減而影響讀卡機正常運作。
*讀卡機感應距離容易受到金屬等物質的影響, 安裝位置如為金屬材質, 建議在讀卡機背部加裝適當厚度的隔離墊片。
*2個讀卡機如果距離太近將會互相干擾而影響感應距離甚至無法感應, 建議2個讀卡機之間的距離最少30公分以上。

5 Testing / 测试/ 測試

To avoid interference self-detection of sensitive touch keypad, please do not touch the keypad when input power.
触摸按键机种安装送电时, 需注意勿碰触到按键, 以免按键误动作。
觸摸按鍵機種安裝送電時, 需注意勿碰觸到按鍵, 以免按鍵誤動作。

